

Cat. No. 01882319

Rev. C 12/16/02

DCO # 4930

Installation
and
Operating
Instructions

CULLIGAN
SILVER SERIES™
AUTOMATIC
WATER CONDITIONER
MODELS FROM 2001


Culligan®

Attention Culligan Customer:

The installation, service and maintenance of this equipment should be rendered by a qualified and trained service technician. Your local independently operated Culligan dealer employs trained service and maintenance personnel who are experienced in the installation, function and repair of Culligan equipment. This publication is written specifically for these individuals and is intended for their use.

We encourage Culligan users to learn about Culligan products, but we believe that product knowledge is best obtained by consulting with your Culligan dealer. Untrained individuals who use this manual assume the risk of any resulting property damage or personal injury.

 **WARNING - Prior to servicing equipment, disconnect power supply to prevent electrical shock.**

 **WARNING - If incorrectly installed, operated or maintained, this product can cause severe injury. Those who install, operate, or maintain this product should be trained in its proper use, warned of its dangers, and should read the entire manual before attempting to install, operate or maintain this product.**

THIS SYSTEM IS NOT INTENDED TO BE USED FOR TREATING WATER THAT IS MICROBIOLOGICALLY UNSAFE OR OF UNKNOWN QUALITY WITHOUT ADEQUATE DISINFECTION BEFORE OR AFTER THE SYSTEM.

CULLIGAN INTERNATIONAL COMPANY
One Culligan Parkway
Northbrook, Illinois 60062-6209
847.205.6000

Installation
and
Operating
Instructions

**CULLIGAN
SILVER SERIES™
AUTOMATIC
WATER CONDITIONER
MODELS FROM 2001**

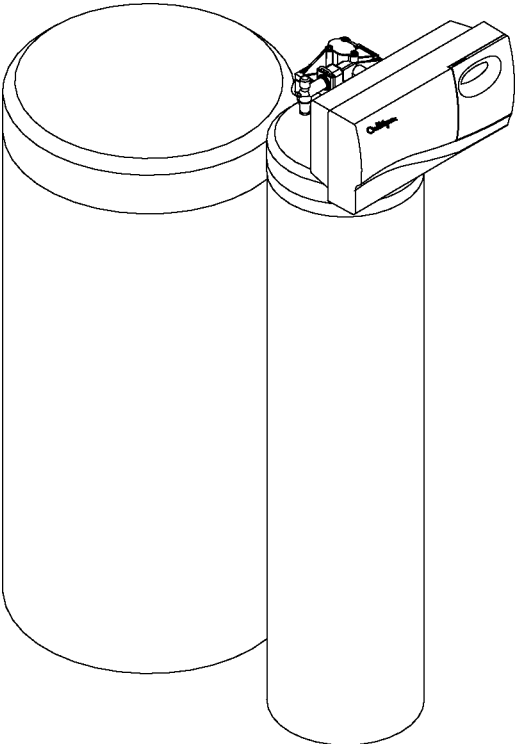


Table of Contents

	Page
Introduction	2
Specifications	3
Preparation	4
Installation	6
Settings	12
Programming	15
Manual Cycling	19
Service Check	20
Operation	21
Sanitizing Instructions	22
Parts List	23

Introduction

The Culligan Silver Series™ Water Softeners are tested and validated by WQA and certified by UL against ANSI/NSF Standard 44 for the effective reduction of calcium and magnesium (hardness) as well as Barium and Radium 226/228*.

For installations in Massachusetts, the Commonwealth of Massachusetts Plumbing Code 248 CMR shall be adhered to. Consult your licensed plumber for installation of the system. This system and its installation must comply with state and local regulations.



ANSI/NSF 44
Water Softener
81VW

SAFE PRACTICES

Throughout this manual there are paragraphs set off by special headings.

NOTICE: Notice is used to emphasize installation, operation or maintenance information which is important, but does not present any hazard.

Example: **NOTICE:** *The nipple must extend no more than 1 inch above the cover plate.*

CAUTION: Caution is used when failure to follow directions could result in damage to equipment or property.
Example:

CAUTION: *Disassembly while under water pressure can result in flooding.*

WARNING: Warning is used to indicate a hazard which could cause injury or death if ignored. Example:

WARNING! ELECTRICAL SHOCK HAZARD! UNPLUG THE UNIT BEFORE REMOVING THE COVER OR ACCESSING ANY INTERNAL CONTROL PARTS.

SERIAL NUMBERS

The control valve serial number is located on the back of the timer case.

The media tank serial number is located on the top surface of the tank.

NOTICE: *Do not remove or destroy the serial number. It must be referenced on request for warranty repair or replacement.*

This publication is based on information available when approved for printing. Continuing design refinement could cause changes that may not be included in this publication.

**Verified utilizing hardness surrogate per ANSI/NSF Standard 44.*

Specifications

Culligan Silver Series™ Water Conditioners with Time Clock, Aqua-Sensor® Device or Soft-Minder® Meter

	9" Model	12" Model
Control Valve	5-cycle, Reinforced Thermoplastic	5-cycle, Reinforced Thermoplastic
Overall Conditioner Height	51 in	51 in
	1 295 mm	1 295 mm
Media Tank Dimensions (Dia x Ht)	9 x 45 in	12 x 45 in
	229 x 1 143 mm	305 x 1 143 mm
Salt Storage Tank Dimensions (Dia x Ht)	16 x 43 in	18 x 43 in
	406 x 1 092 mm	457 x 1 092 mm
	18 x 43 in	
	457 x 1092 mm	
Exchange Media, Type and Quantity	Cullex® Media, 0.86 ft ³	Cullex® Media, 1.4 ft ³
	Cullex® Media, 24.5 L	Cullex® Media, 40 L
Underbedding, Type and Quantity	Cullsan® Underbedding, 12 lb	Cullsan® Underbedding, 30 lb
	Cullsan® Underbedding, 5.4 kg	Cullsan® Underbedding, 14 kg
Exchange Capacity	17,500 gr @ 4.0 lb	24,100 gr @ 6.0 lb
@ Salt Dosage Per Recharge ¹	1 133 g @ 1.8 kg	1 560 g @ 2.7 kg
	23,900 gr @ 8.0 lb	34,500 gr @ 12.0 lb
	1 547 g @ 3.6 kg	2 234 g @ 5.4 kg
	26,600 gr @ 12.0 lb	41,900 gr @ 18.0 lb
	1 722 g @ 5.4 kg	2 713 g @ 8.1 kg
Efficiency rated dosage ¹	4 380 gr/lb	4 010 gr/lb
	626 g/kg	573 g/kg
Freeboard to Media ²	16.6-17.6 in	17.5-18.5 in
	420-447 mm	444-470 mm
Freeboard to Underbedding ³	39.2 in	38.5 in
	996 mm	978 mm
Salt Storage Capacity	250 lb or 375 lb	375 lb
	114 kg or 170 kg	170 kg
Rated Service Flow @ Pressure Drop	7.5 gpm @ 15 psi	7.5 gpm @ 13 psi
	30 Lpm @ 102 kPa	28 Lpm @ 90 kPa
Total Hardness, Maximum	75 gpg	99 gpg
	1 283 mg/L	1 692 mg/L
Total Iron, Maximum	5 ppm	5 ppm
	5 mg/L	5 mg/L
Hardness to Iron Ratio, Minimum	8 gpg to 1 ppm	8 gpg to 1 ppm
	140 mg/L to 1 mg/L	140 mg/L to 1 mg/L
Operating Pressure	20-125 psi	20-125 psi
	140-860 kPa	140-860 kPa
Operating Temperature	33-120°F	33-120°F
	1-50°C	1-50°C
Electrical Requirements	24V/60 Hz	24V/60 Hz
Electrical Power Consumption, Min/Max	3 Watts/35 Watts	3 Watts/35 Watts
Drain Flow, Maximum ⁴	2.3 gpm	3.5 gpm
	9 Lpm	14 Lpm
Recharge Time, Average ⁵	80 min	85 min
Recharge Water Consumption, Average	40 gal	82 gal
	170 L	325 L

1 The efficiency rated dosage is only valid at the 4 lb. salt dosage for the 9" models and 6 lb. for the 12" models.

2 Measured from top of media to top surface of tank threads (backwashed and drained).

3 Measured from top of underbedding to top surface of tank threads.

4 Backwash at 120 psi (830 kPa).

5 10 minute backwash, 4 lb (1.8 kg) 9" model or 6 lb (2.7 kg) 12" model salt dosage.

Preparation

COMPONENT DESCRIPTION

The water conditioner is shipped from the factory in a minimum of four cartons. Remove all components from their cartons and inspect them before starting installation.

Control Valve Assembly - Includes the 5-cycle regeneration control valve and the Accusoft[®] Microprocessor. Small parts packages will contain additional installation hardware. Installation and Operations Instructions and an Owner's Guide are included.

Media Tank - Includes Tripl-Hull[™] media tank complete with Culler[®] ion exchange resin, underbedding and outlet manifold.

Salt Storage Tank Assembly - Includes salt storage container with support plate and Dubl-Safe[™] brine refill valve and chamber.

Bypass Valve - Includes the Cul-Flo-Valv[®], interconnecting couplings, and the screws necessary for assembly.

TOOLS AND MATERIALS

The following tools and supplies will be needed, depending on installation method. **Observe all applicable codes.**

All Installations

- Safety glasses
- Phillips screwdrivers, small and medium tip.
- Gauge assembly (PN 00-3044-50 or equivalent)
- Silicone lubricant (PN 00-4715-07 or equivalent) - **DO NOT USE PETROLEUM-BASED LUBRICANTS**
- A bucket, preferably light-colored
- Towels

Special Tools

- Torch, solder and flux for sweat copper connections
- Threading tools, pipe wrenches and thread sealer for threaded connections.
- Saw, solvent and cement for plastic pipe connections.

Materials

- Brine line, 5/16" (PN 00-3031-28 or equivalent)
- Drain line, 1/2" (PN 00-3030-82, gray, semi-flexible; or PN 00-3319-46, black, semi-rigid; or equivalent)
- Thread sealing tape
- Pressure reducing valve (if pressure exceeds 125 psi [860 kPa], PN 00-4909-00 or equivalent)
- Pipe and fittings suited to the type of installation
- Water softener salt (rock, solar or pellet salt formulated specifically for water softeners)

APPLICATION

Water quality - Verify that raw water hardness and iron are within limits. Note the hardness for setting the salt dosage and recharge frequency.

Pressure - If pressure exceeds 125 psi (860 kPa), install a pressure reducing valve (see materials checklist). On private water systems, make sure the minimum pressure (the pressure at which the pump starts) is greater than 20 psi (140 kPa). Adjust the pressure switch if necessary.

 CAUTION: The use of a pressure reducing valve may limit the flow of water in the household.

Temperature - Do not install the unit where it might freeze, or next to a water heater or furnace or in direct sunlight.

LOCATION

Space requirements - Allow 6-12 inches (15-30 cm) behind the unit for plumbing and drain lines and 4 feet (1.3 meters) above for service access and filling the salt container.

Floor surface - Choose an area with solid, level floor free of bumps or irregularities. **Bumps, cracks, stones and other irregularities can cause the salt storage tank bottom to crack when filled with salt and water.**

Drain facilities - Choose a nearby drain that can handle the rated drain flow (floor drain, sink or stand pipe). Refer to the Drain Line Chart, Table 1 (page 10), for maximum drain line length.

NOTICE: Most codes require an anti-siphon device or airgap. Observe all local plumbing codes and drain restrictions. The system and installation must comply with all state and local laws and regulations.

Electrical facilities - A 10-foot cord and wall mount plug-in transformer are provided. The customer should provide a receptacle, preferably one not controlled by a switch that can be turned off accidentally. Observe local electrical codes.

Installation

PLACEMENT

Refer to Figure 1 for system placement.

- Set the media tank on a solid, level surface near water, drain and electrical facilities. Place the outlet (black coupling) of the tank on the left.
- Set the brine system on a flat, smooth, solid surface as near the media tank as possible.

MOUNT THE CONTROL VALVE

See Figure 2 for a visual on mounting the control valve to the tank.

- Remove and discard the protective covers on the tank couplings.
- Lubricate the o-rings on the tank couplings with silicone lubricant.
- Place the control on the tank couplings and press down firmly.

NOTICE: The white tank coupling is the inlet, and should be located on the inlet side (right side) of the control.

- Install the u-clamps on both sides of the control and secure with the screws.

TWELVE INCH SOFTENERS

As shipped from the factory, each control is equipped as a 9-inch unit. A 12-inch eductor nozzle and backwash flow control are included with each unit for conversion for use with the 12-inch tanks.

NOTICE: To prevent injury, convert unit to a twelve-inch configuration prior to installation.

Refer to Figure 3 for a visual on changing the eductor nozzle and the backwash flow control.

Eductor Nozzle Replacement:

- Remove the three screws on the eductor cap and remove the cap.
- Remove the eductor assembly.
- Remove the eductor screen from the assembly
- Remove the blue nozzle and replace it with the beige nozzle. Make sure to put the o-ring on the beige nozzle.
- Reverse the procedure to reassemble. To prevent leaks, ensure that the gasket is in the proper position.

Backwash Flow Control Replacement:

- Remove the drain clip and pull the drain elbow straight off.
- Remove the backwash flow control located behind the elbow. Put the #3 restrictor in its place.

NOTICE: The number on the flow control should face into the valve body.

- Reverse the procedure to reassemble.

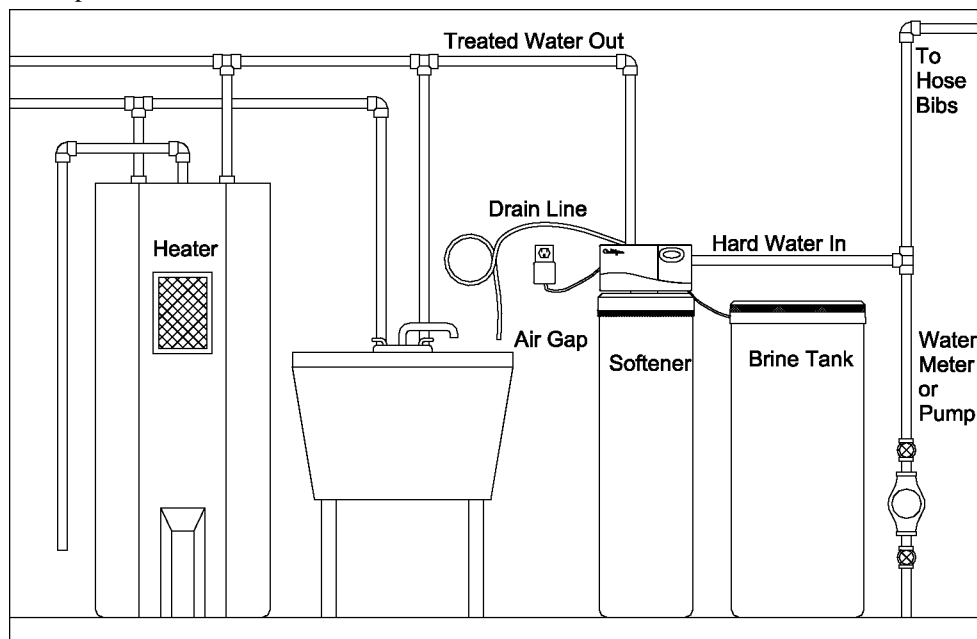


FIG. 1

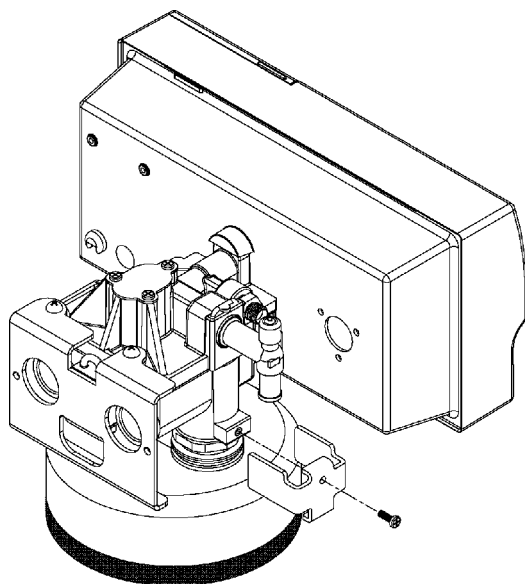


FIG. 2

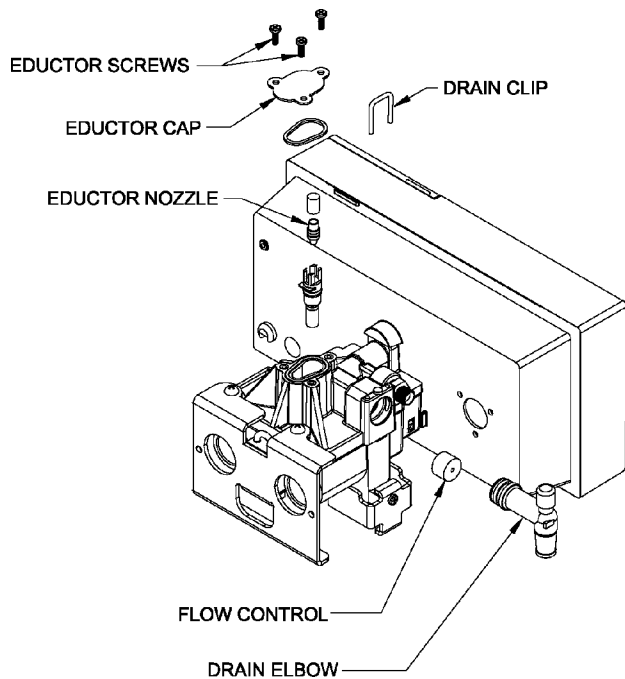


FIG. 3

PLUMBING CONNECTIONS

Two methods of connecting the water softener to the plumbing system are available. Shipped with each softener is a Culligan® Cul-Flo-Valv® bypass valve, either PN 01-0124-88 or 01-0102-38, which is used to connect the softener to the plumbing system. The bypass allows the softener to be isolated from the water service line if service is necessary while still providing water to the house. If local conditions warrant, you may use the sweat adaptor kits, PN 00-3314-44 or 00-3314-45.

NOTICE: *The Soft-Minder® meter cannot be used with the sweat adaptors.*

⚠ CAUTION: Close the inlet supply line and relieve system pressure before cutting into the plumbing! Flooding could result!

⚠ CAUTION: When making sweat connections, remove all plastic and rubber components which contact brass or copper. Damage to these components may result otherwise.

BYPASS VALVE INSTALLATION

AQUA-SENSOR® SENSING DEVICE AND TIME CLOCK UNITS ONLY

The bypass valve connects directly to the backplate of the valve with a pair of couplings and screws (Figure 4). To facilitate this connection, remove the plate by pulling up on the u-clip on the back of the valve. Lubricate all o-rings with silicone lubricant.

BYPASS VALVE INSTALLATION

SOFT-MINDER® METER ONLY

The Soft-Minder meter is placed between the bypass valve and the control in place of the couplings shipped with the Cul-Flo-Valv® (Figure 5). Make sure the meter is on the outlet port of the control and that it is installed with the arrow pointing in the direction of water flow. A pair of elongated bolts are packaged with the meter to hold the bypass valve to the back plate of the control. Lubricate all o-rings with silicone lubricant.

SWEAT ADAPTOR INSTALLATION

The sweat adaptors use a snap ring to hold them to the backplate of the control valve. The back plate will need to be removed from the valve for this connection. A pair of snap ring pliers, PN 00-5916-09, are needed for this connection.

⚠ CAUTION: When reinstalling back plate to control valve, make sure the u-clip fully engages the two bottom holes of the bracket (Figure 6). Secure bracket from the top with the two mounting screws provided.

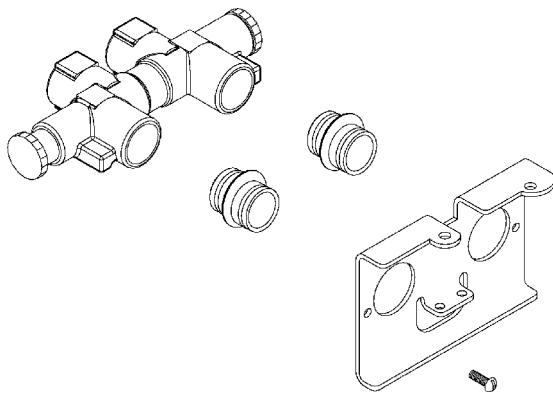


FIG. 4

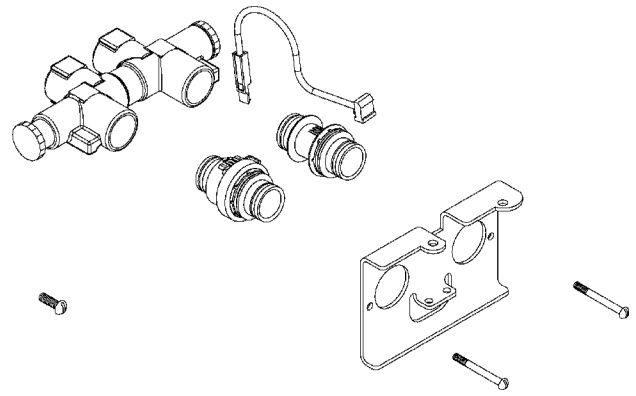


FIG. 5

CONNECT THE BRINE LINE

Refer to Figures 6 & 7.

- Use the length of brine line included in the brine tank, or measure a length of brine line sufficient to reach from the brine tank to the brine fitting, with no sharp bends. For easier access to the float it is recommended to add an extra four feet (1.3 meters) of length to the brine line. Cut both ends of the brine line squarely and cleanly.
- Remove the brine valve from the brine tank and then remove the white nut and insert from the float rod. Return float rod to its original position.
- Slip the white nut over one end of the tubing and press the plastic insert into the end of the tubing (Figure 7). Connect to the brine valve and tighten nut.
- Remove white nut from the brine connection, and remove the plastic insert from the brine connection fitting.
- Slip the white nut over one end of the tubing and press the plastic insert into the end of the tubing (Figure 7). Connect to the brine connection on the valve and tighten nut (Figure 6).

DRAIN LINE CONNECTION

Refer to Table 1, page 10 under the applicable tank size for drain line length and height limitations, and to Figure 3.

- Remove 1/2" pipe clamp from the small parts pack included with the control.
- Route a length of 1/2" drain line from the drain elbow to the drain.
- Fasten the drain line to the elbow with the clamp.
- Secure the drain line to prevent its movement during regeneration. When discharging into a sink, or open floor drain, a loop in the end of the tube will keep it filled with water and will reduce splashing at the beginning of each regeneration.

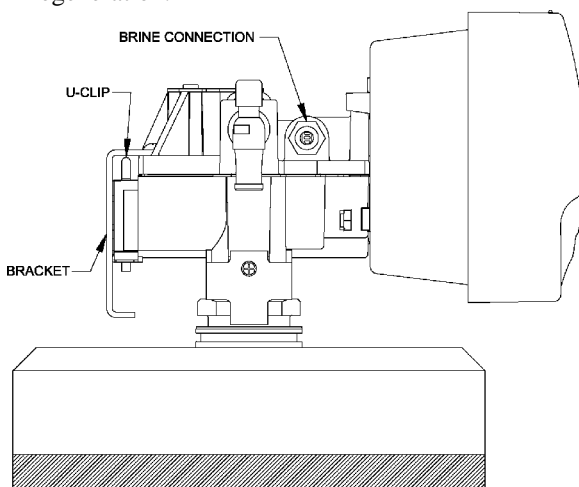


FIG. 6

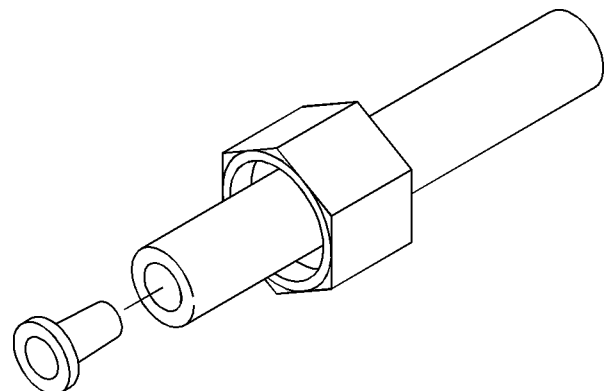


FIG. 7

NOTICE: Waste connections or drain outlets shall be designed and constructed to provide for connection to the sanitary waste system through an air gap of 2 pipe diameters or 1 inch, whichever is larger.

NOTICE: Observe all plumbing codes. Most codes require an anti-siphon device or air gap at the discharge point. The system and installation must comply with state and local laws and regulations.

FILL THE SALT STORAGE CONTAINER

Fill the salt storage container with water until the level reaches about 1 inch above the salt support plate. Pour salt into the container. Fill with salt to within a few inches of the top.

AQUA-SENSOR[®] PROBE AND SOFT-MINDER[®] METER CONNECTION

To connect the probe or meter leads refer to Figure 8 and proceed as follows:

- Remove the timer cover by unsnapping it from the back plate.
- Unhook the circuit board mounting plate by lifting the top snap and removing from the backplate.
- Slip the sensor probe lead or meter cable through the hole and toward the circuit board.

NOTICE: The strain relief located on the back of the wire connection for the Aqua-Sensor[®] probe may have to be removed in order to fit it through the backplate. Replace the strain relief if you need to remove it for assembly.

- Connect the lead to the circuit board. The Aqua-Sensor[®] probe terminal is labeled "AQUA" while the Soft-Minder[®] meter terminal is labeled "METER".
- Pull any excess cable wire back out of the enclosure, and route the wiring inside the enclosure to avoid any interference with moving parts.
- Locate the strain relief bushing in the parts pack. Place it on the cable at the point of entry to the rear of the timer plate and push it into the hole.

NOTICE: The wire connectors must be connected to the circuit board properly. The wires must exit the plug-in connector opposite of the raised white base of the circuit board connector. Failure to properly connect any of the connectors will result in a malfunction of the circuit board operation.

ELECTRICAL CONNECTION

The power cord needs to be connected to the plug-in transformer. Figure 9 shows the cord attachment to the transformer.

NOTICE: Observe all state and local electrical codes.

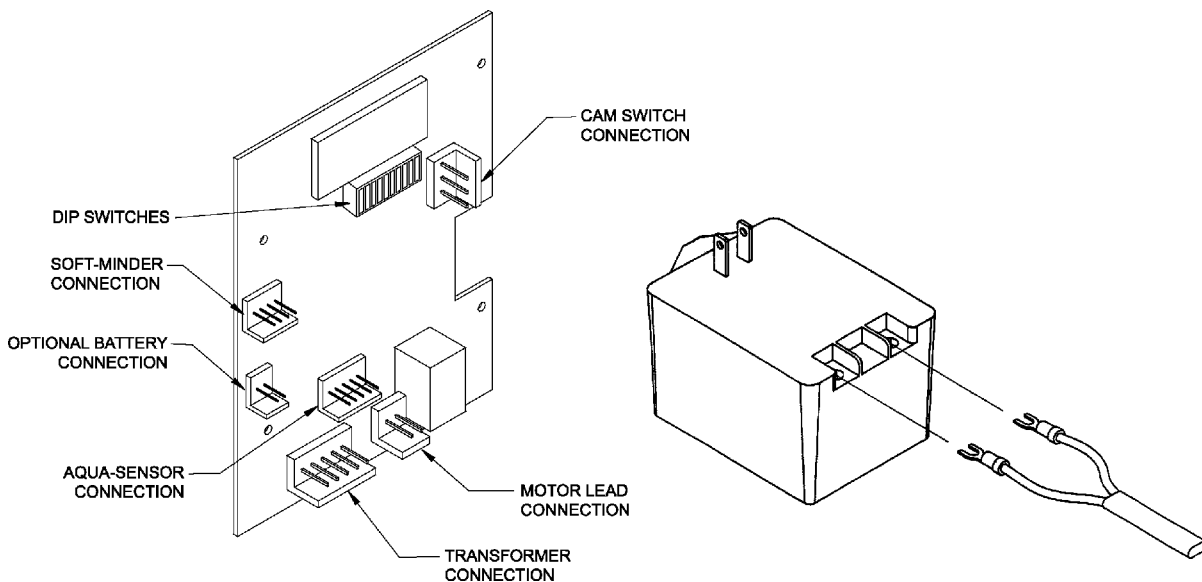


FIG. 8

FIG. 9

TABLE 1 - DRAIN LINE LENGTH AND HEIGHT LIMITATIONS

9-INCH MODELS

Average Water Pressure	Height of Drain Discharge Above Floor Upon Which Softener Sets										
	4 in.	1 ft	2 ft	3 ft	4 ft	5 ft	6 ft	7 ft	8 ft	9 ft	10 ft
psi	4 in.	1 ft	2 ft	3 ft	4 ft	5 ft	6 ft	7 ft	8 ft	9 ft	10 ft
kPa	0.1 m	0.3 m	0.6 m	0.9 m	1.2 m	1.5 m	1.8 m	2.1 m	2.4 m	2.7 m	3.1 m
30	56	50	40	30	20	10					
210	17.1	15.3	12.2	9.2	6.1	3.1					
50	112	106	96	86	76	66	56	46	36	26	16
350	34.2	32.3	29.3	26.2	23.2	20.1	17.1	14.0	11.0	7.9	4.9
70	143	137	127	117	107	97	87	77	67	57	47
480	43.6	41.8	38.7	35.7	32.6	29.6	26.5	23.5	20.4	17.4	14.3
90	153	147	137	127	117	107	97	87	77	67	57
620	46.7	44.8	41.8	38.7	35.7	32.6	29.6	26.5	23.5	20.4	17.4
120	159	153	143	133	123	113	103	93	83	73	63
830	48.5	46.7	43.6	40.6	37.5	34.5	31.4	28.4	25.3	22.3	19.2

12-INCH MODELS

Average Water Pressure	Height of Drain Discharge Above Floor Upon Which Softener Sets										
	4 in.	1 ft	2 ft	3 ft	4 ft	5 ft	6 ft	7 ft	8 ft	9 ft	10 ft
psi	4 in.	1 ft	2 ft	3 ft	4 ft	5 ft	6 ft	7 ft	8 ft	9 ft	10 ft
kPa	0.1 m	0.3 m	0.6 m	0.9 m	1.2 m	1.5 m	1.8 m	2.1 m	2.4 m	2.7 m	3.1 m
30	44	38	28	18							
210	13.4	11.6	8.5	5.5							
50	103	97	87	77	67	57	47	37	27	17	7
350	31.4	29.6	26.5	23.5	20.4	17.4	14.3	11.3	8.2	5.2	2.1
70	129	123	113	103	93	83	73	63	53	43	33
480	39.3	37.5	34.5	31.4	28.4	25.3	22.3	19.2	16.2	13.1	10.1
90	145	139	129	119	109	99	89	79	69	59	49
620	44.2	42.4	39.3	36.3	33.2	30.2	27.1	24.1	21.0	18.0	14.9
120	153	147	137	127	117	107	97	87	77	67	57
830	46.7	44.8	41.8	38.7	35.7	32.6	29.6	26.5	23.5	20.4	17.4

The microprocessor can be set in three distinct operation modes. Aqua-Sensor[®] Sensing Device, Soft-Minder[®] meter, or Timeclock. As shipped from the factory, the control is set for 9" Timeclock operation. A set of dip switches, located on the back of the control, may have to be changed for proper operation of the unit. Refer to Figure 12 and Table 3 for the proper setting of these dip switches.

AQUA-SENSOR OPERATION

The Aqua-Sensor Sensing Device utilizes a pair of cells to sense the passage of hardness through the water softener. It can automatically adjust for water with variable hardness levels. As a result, it is the most efficient means of operating a water softener. When hardness is sensed, the unit signals for a regeneration. The "REGEN" enunciator will light at this point. The unit will perform a standard regeneration cycle at the preset time, unless the number 6 dip switch is turned on. When the number 6 dip switch is in the 'ON' position, a regeneration will begin immediately.

The Aqua-Sensor models contain a feature which can automatically detect when the brine solution has been rinsed through the Cullex[®] media. This feature will advance the control to the next position when it senses that the brine has been rinsed out prior to the time set in the Brine/Rinse option.

Since the Aqua-Sensor device automatically senses hardness in the water, the programming is limited to the Time-of-Day, Time-of-Regeneration, Salt Dosage, Backwash Time and Brine/Rinse settings. The numeric enunciator will only light for those programming options (numbers 1-6, 9, and 10). Refer to the programming section for further information on programming the microprocessor.

SOFT-MINDER OPERATION

The Soft-Minder meter utilizes a turbine impeller to accurately monitor the customers water usage. After a predetermined amount of water has passed through the system, the microprocessor will signal a regeneration. The "REGEN" enunciator will light at this point. The unit will perform a standard regeneration cycle at the preset time, unless the number 6 dip switch is turned on. When the number 6 dip switch is in the 'ON' position, a regeneration will begin immediately.

The microprocessor automatically calculates the gallons of water which can be treated based on the salt dosage, the water hardness, and the tank size. Refer to Tables 4B and 5B for capacity and reserve values that the microprocessor will use based on its settings. The GALLONS TO SIGNAL setting can be manually set to directly override the microprocessor calculations. This setting can be modified when positioned at numeric enunciator 8. The gallon value may need to be raised or lowered to meet the needs of your specific application. The control must be cycled through a complete regeneration before the gallon override setting is stored by the microprocessor.

NOTICE: Changing the capacity will affect the reserve capacity. An INCREASE in the gallons capacity will DECREASE the reserve capacity. A DECREASE in the gallons capacity will INCREASE the reserve capacity. Refer to Tables 4B and 5B to determine the units total capacity based on salt dosage and the hardness level.

The programming of the Soft-Minder[®] provides several settable variables, the Time-of-Day, Time-of-Regeneration, Salt Dosage, Backwash Time, Brine/Rinse Time, Hardness, and Gallons to Signal. The numeric enunciator will light for programming sequences 1-10. Refer to the programming section for further information on programming the microprocessor.

TIME CLOCK OPERATION

When the microprocessor is set-up as a time clock unit, the Culligan Silver Series[™] control will regenerate at fixed intervals which are determined by the water hardness, the salt dosage, and the household's water usage. To calculate the regeneration interval, locate the total gallon capacity in Table 4B or 5B based on the salt dosage and the water hardness. Divide the units total capacity by the anticipated daily gallon usage for the household. This value is the regeneration interval, always round this value up to the nearest whole number. This regeneration interval can be set anywhere from 1 to 42 days.

The programming for the time clock models is limited to Time-of-Day, Time-of-Regeneration, Salt dosage, Backwash Time, Brine/Rinse Time, and the Regeneration Interval. The numeric enunciator will only light for those programming options (numbers 1-6, and 8-10). Refer to the programming section for further information on programming the microprocessor.

CAPACITY AND SALT SETTINGS

The microprocessor calculates the total gallon capacity based on the salt dosage, water hardness and tank size. Table 2 will help in anticipating the total gallons of usage based on the total number of people in the household.

For future reference, record the salt dosage, hardness level, and regeneration interval (time clock models only) below:

- Salt Dosage _____
- Hardness Level _____
- Regeneration Interval (Days) _____
TIME CLOCK MODELS ONLY

TABLE 2 - Daily Water Usage

Persons in Household	Gallons per Day
2	150
3	225
4	300
5	375
6	450
7	525
8	600
9	675
10	750

BRINE VALVE "A" DIMENSION

The Culligan unit contains a brine float which can serve as a backup refill shutoff in the event of a failure, such as a power outage when in the refill position. The float level should be set based on the salt dosage setting. Refer to Figure 10.

- Lift the brine valve from the brine chamber.
- Find the correct "A" dimension from Tables 4 & 5.
- Set the distance from the top of the filter screen to the base of the float accordingly. The slight difference in height when the float is pulled up or down is negligible.

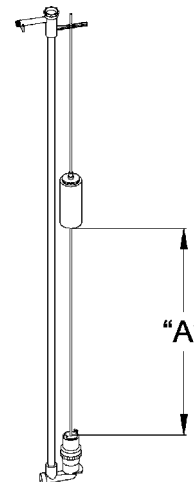


FIG. 10

DIP SWITCH SETTINGS

The microprocessor has several dip switches that can be switched for various additional functions. Listed are the functions for the dip switches used on the Mark 100 control.

Dip Switch	Function	Default (OFF) Position
4	9" - 12" Tank Settings	9" Tank
6	Delay vs. Immediate Regeneration	Delayed Regeneration
7	English vs. Metric Settings	English Settings
8	12 or 24 Hour Clock	12 Hour Clock
10	Time Clock Backup	No Forced Regeneration

Refer to Figure 11 for setting the dipswitches. As shipped from the factory all dip switches are in the **off** position.

NOTICE: The end of a ball point pen works well to flip the dip switches as little force is required to flip the switches. DO NOT use a pencil as the graphite may damage the dip switch.

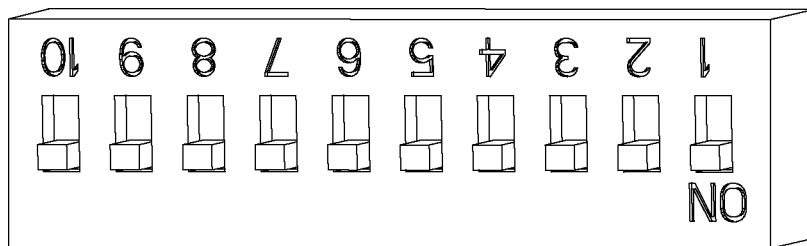


FIG. 11

TABLE 3 - DIP SWITCH SETTING

			DIP SWITCHES										
			1	2	3	4	5	6	7	8	9	10	
Control Type	English	9"	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	Settings	12"	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	Metric	9"	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF
	Settings	12"	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	OFF

Programming

Make sure the inlet water supply is turned off, then supply power to the timer. The display will power up flashing "12:00 PM". After 1 minute the motor will energize and cycle the control, without stopping, to the home position. This is required to ensure that the control is in the home position.



FIG. 12 - Circuit Board Display


The timer uses four buttons:

1. STATUS: Advance timer through display options.
2. UPARROW: Increase the setting.
3. DOWNARROW: Decrease the setting.
4. REGEN: Initiate a manual regeneration.

SETTING THE MICROPROCESSOR

The microprocessor senses when it is installed as a Soft-Minder or Aqua-Sensor® control. Adding or removing any connection to the board while power is on, or flipping any of the dip switches will automatically reset the microprocessor to the factory settings.

1. With a flashing or blank display, pressing the status button twice will move to the **Time-of-Day** adjustment. Adjust the time by using the up and down arrows. A number "1" will appear at the bottom of the display while in this mode.




Press ▲ to increase or ▼ to decrease

2. Press status again, this displays the **Time-of-Regeneration** for delayed units, adjust using the up and down arrows. A number "2" will appear at the bottom of the display while in this mode.




Press ▲ to increase or ▼ to decrease

3. Press status again, the number "3" will appear at the bottom of the display. **This setting is not used**, and any changes made will not affect the operation of the microprocessor.



Press ▲ to increase or ▼ to decrease

4. Pressing status again will show the **Salt Dosage**. This can be adjusted with the up and down arrows, the range is 3-15 lbs. for the 9" controls and 5-24 lbs. on 12" controls. A number "4" will appear at the bottom of the display while in this mode.




Press ▲ to increase or ▼ to decrease

5. Press status again, this displays the **Backwash Time** in minutes. The setting can be adjusted between 5 and 40 minutes by using the up and down arrows. A number “5” will appear at the bottom of the display while in this mode.



Press ▲ to increase or ▼ to decrease

6. Press status again to display the **Brine/Rinse Time** in minutes. The settings can be adjusted using the up and down arrows (35-99 min). A number “6” will appear at the bottom of the display while in this mode.



Press ▲ to increase or ▼ to decrease

7. Press status again to display the **Hardness Level** in grains per gallon. The setting can be adjusted from 2-99 gpg by using the up and down arrows. This screen will not appear when the Aqua-Sensor® probe is attached. A number “7” will appear at the bottom of the display while in this mode.




Press ▲ to increase or ▼ to decrease

8. Press status again, for time clock models the display will show the **Regeneration Interval**. The setting can be adjusted using the up and down arrows. Controls with a Soft-Minder® meter will display the **Gallons to Signal** (multiply the displayed value by 10). A number “8” will appear at the bottom of the display while in this mode.



Press ▲ to increase or ▼ to decrease

8A. Display menu '8A' will light when dip switch #10 is in the ON position. This is the **Time Clock Backup** feature. The control will force a regeneration, within a range of 1-42 days, when in Aqua-Sensor® or Soft-Minder® meter mode.



Press ▲ to increase or ▼ to decrease

9. Pressing status again will display the **Lock/Unlock** feature. A “U” in the display signifies an unlocked microprocessor, while a “L” will lock the settings except for the time of day. To toggle between the two settings press both arrow keys simultaneously. A number “9” will appear at the bottom of the display while in this mode.



Press ▲ simultaneously ▼

10. Pressing status again brings up the ability to **Enable/Disable** the screen blanking. To have the display constantly lit, press the up arrow, a “d” for disable will appear in the display. Pressing the up arrow again displays an “E”, signifying that display blanking is enabled. A number “10” will appear at the bottom of the display while in this mode.



Press ▲ to change

NOTICE: Programming changes are not locked into the microprocessor memory until the control completes a regeneration cycle. To initiate a manual regeneration, press the REGEN. button twice, the "REGEN" enunciator will flash on the display. Refer to the Manual Cycling section on how to step through the regeneration stages.

TABLE 4A - CAPACITY, 9" AQUA-SENSOR® SENSING DEVICE (GALLONS)

SALT DOSAGE	"A" DIMENSION			TOTAL CAPACITY	CAPACITY TO SIGNAL	TOTAL CAPACITY	CAPACITY TO SIGNAL	HARDNESS											
	160 LB IN (CM)	250 LB IN (CM)	375 LB IN (CM)					1-5	6-10	11-15	16-20	21-25	26-30	31-35	36-40	41-45	46-50	51-55	56-60
8	14-3/4 (37.5)	9-1/4 (23.5)	7-1/2 (19.1)	4,900	2,450	1,633	1,225	980	817	700	613	544	490	445					
12	21-3/4 (55.2)	15-3/4 (40.0)	11-3/8 (26.9)	3,537	1,949	1,179	1,004	707	590	505	442	393	354	322					
				5,420	2,710	1,807	1,355	1,084	903	774	678	602	542	493	452	417	387	301	
				3,656	1,828	1,219	914	731	609	522	457	406	366	332	305	281	261	244	

TABLE 4B - CAPACITY, 9" SOFT-MINDER® METER (GALLONS)

SALT DOSAGE	"A" DIMENSION			TOTAL CAPACITY	CAPACITY TO SIGNAL	TOTAL CAPACITY	CAPACITY TO SIGNAL	HARDNESS											
	160 LB IN (CM)	250 LB IN (CM)	375 LB IN (CM)					1-5	6-10	11-15	16-20	21-25	26-30	31-35	36-40	41-45	46-50	51-55	56-60
4	7-3/4 (19.7)	4-5/8 (11.7)	3-1/4 (8.9)	3,220	1,610	1,073	805	644	537	412									
8	14-3/4 (37.5)	9-1/4 (23.5)	7-1/2 (19.1)	4,900	2,450	1,633	1,225	980	817	700	613	544	490	445					
12	21-3/4 (55.2)	15-3/4 (40.0)	11-3/8 (26.9)	3,314	1,657	1,084	813	631	526	442	387	333	300	267					
				5,420	2,710	1,807	1,355	1,084	903	774	678	602	542	493	452	417	387	361	
				3,656	1,828	1,195	896	696	580	487	426	602	331	294	270	246	229	209	

TABLE 5A - CAPACITY, 12" TIMECLOCK AND AQUA-SENSOR® SENSING DEVICE (GALLONS)

SALT DOSAGE	"A" DIMENSION			TOTAL CAPACITY CAPACITY TO SIGNAL	HARDNESS														
	160 LB IN (CM)	250 LB IN (CM)	375 LB IN (CM)		1-5	6-10	11-15	16-20	21-25	26-30	31-35	36-40	41-45	46-50	51-55	56-60	61-65	66-70	71-75
	12	21-3/4 (56.2)	15-3/4 (40.0)		11-3/8 (28.9)	6,740 4,542	3,370 2,271	2,247 1,514	1,685 1,136	1,348 908	1,123 757	963 649	843 568	749 505	674 454	562 379			
18	N/A	24-1/2 (62.2)	17-1/4 (43.8)	7,660 5,200	3,830 2,600	2,553 1,733	1,915 1,300	1,532 1,040	1,277 867	1,094 743	958 650	851 578	766 520	638 433	547 371	479 325	426 289	383 260	

TABLE 5B - CAPACITY, 12" SOFT-MINDER® METER (GALLONS)

SALT DOSAGE	"A" DIMENSION			TOTAL CAPACITY CAPACITY TO SIGNAL	HARDNESS														
	160 LB IN (CM)	250 LB IN (CM)	375 LB IN (CM)		1-5	6-10	11-15	16-20	21-25	26-30	31-35	36-40	41-45	46-50	51-55	56-60	61-65	66-70	71-75
	6	14-3/4 (37.5)	7-3/8 (18.7)		5-1/2 (14.0)	4,520 3,495	2,260 1,748	1,507 1,143	1,130 857	904 666	753 555	646 466	565 408						
12	21-3/4 (56.2)	15-3/4 (40.0)	11-3/8 (28.9)	6,740 4,832	3,370 2,416	2,247 1,580	1,685 1,185	1,348 920	1,123 767	963 644	843 564	749 486	674 437	562 357					
18	N/A	24-1/2 (62.2)	17-1/4 (43.8)	7,660 5,346	3,830 2,673	2,553 1,748	1,915 1,311	1,532 1,018	1,277 849	1,094 713	958 624	851 537	766 484	638 395	547 335	479 286	426 246	383 219	


Manual Cycling

The Culligan® microprocessor can be indexed through the various regeneration stages. For all steps, the cycle numbers do not appear, or change, until the motor stops.


1. Press the status button to move past steps 1-10 until the display is blank. Push the up arrow. The number "11" icon will light up. An "H" will appear in the display. The control is in the HOME position. Pressing the regen button once will light the 'REGEN' icon.




2. Press the regen button one more time. The 'REGEN' icon will blink, and the motor will advance the control. A '1' will appear. The unit is now in the BACKWASH position. The numbers to the right indicate the time remaining for the cycle.

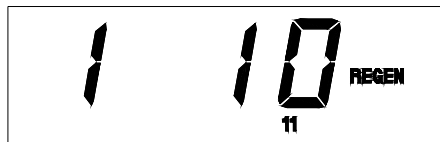


3. Press the up arrow. A '2' will appear in the display, along with the cycle time remaining. The control is in the BRINE DRAW/SLOW RINSE cycle.

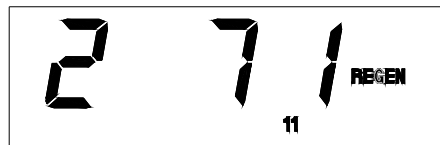

4. Press the up arrow. A '3' will appear in the display, along with the cycle time remaining. The control is now in the FAST RINSE/BRINE REFILL cycle.

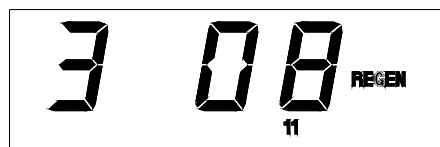


5. Press the up arrow. An 'H' will appear in the display. The unit is in the HOME position. The 'REGEN' enunciator is no longer blinking.

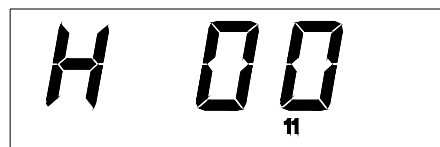

NOTICE: On Aqua-Sensor® controls the display will initially display "H 20" and proceed to count down to zero. This is the 20 minute signal delay built into the Accusoft® microprocessor. The control will not allow another regeneration to occur during this 20 minute period.

6. Press the status key. Time-of-Day appears in the display.

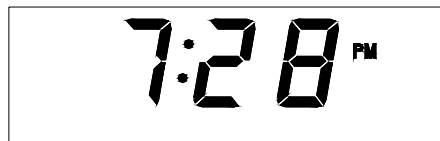

Service Check

The service check mode allows one to view the instantaneous flow rate, the days since the last regeneration, the total number of regenerations, the regenerations in the past fourteen days, and the gallons remaining.

To enter the service check mode, follow these steps:

1. Press the status key to move past steps 1-10 until the display is blank.


2. Push the down arrow. The number '12' will appear only when the Soft-Minder[®] meter is connected. The display reads the gallons per minute flow rate. This screen will update with the current meter reading every 6 seconds.



3. Press the down arrow. The number '13' and an "A" will light at the bottom of the display. The display will indicate the number of regenerations that have occurred in the last 14 days.



4. Press the down arrow. The number '13' and a 'B' will light at the bottom of the display. The display will indicate the total number of regenerations this control has cycled through.

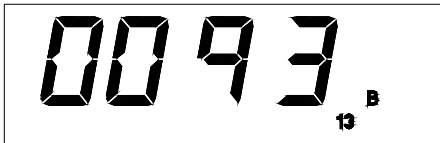

5. Press the down arrow. The number '14' will light at the bottom of the display. The number in the display indicates the number of days since last regeneration.



6. Press the down arrow. The number '15' will be displayed if the flow meter or Aqua-Sensor[®] is connected. For the controls with the Soft-Minder[®] meter, the display indicates the gallons remaining before the unit signals for regeneration (multiply the displayed number by 10). For Aqua-Sensor[®] controls, the number indicates the total minutes of the last brine rinse cycle.



NOTICE: Pushing the up arrow at any of these displays will immediately bring you to the control position display, the number '11' will light at the bottom of the display. Pushing status will return to the time of day display.

Operation

DISPLAY

There are two display modes on the Culligan[®] microprocessor. As shipped from the factory, the display of the board is initially set to turn off if there has been no keyboard activity after a 1 minute period. Touching any key will relight the display. The display can be set so that it will always display the time. For information on changing the display lighting option, refer to the programming section.

REGENERATION

There are several conditions that will cause the control to trip a regeneration. The 'REGEN' enunciator will light when the control has signaled for a regeneration. The 'REGEN' enunciator will flash while the control is in regeneration. The following are conditions that will call for regeneration:

1. When the Aqua-Sensor[®] probe senses the hardness in the Cullex[®] media.
2. When the Soft-Minder[®] meter has recorded the passage of a predetermined number of gallons.
3. When the time clock has counted past the set number of days.
4. At the preset time, when the number of days without a regeneration is equal to the days set in menu #8A.
5. At the preset time, when the 'REGEN.' button is depressed once. 'REGEN.' will light.
6. Immediately, when the 'REGEN.'" button is depressed twice. 'REGEN.' will light and blink.
7. Immediately, if power to the unit has been off for more than 3 hours.

If dip switch 6 is in the ON position, the unit will begin a regeneration immediately for instances 1 and 2. With dip switch 6 in the OFF position, the regeneration will not begin until the preset regeneration time.

START-UP

NOTICE: A sanitizing agent is added to the softener at the factory. Flush the tank to drain with a minimum of 40 gallons of water, or initiate a full regeneration cycle, prior to putting the unit into service.

- Close the main water supply valve.
- Set the Cul-Flo-Valv[®] to the bypass position.
- Ensure that all faucets at the installation site are closed.
- Direct the drain line discharge into a bucket where flow can be observed.
- Plug the transformer into a 120 Volt, 60 Hz, single-phase receptacle.
- Wait 1 minute for the control to energize the motor and home itself.
- Set the timer to the correct time of day.
- Open the main supply valve.
- Initiate an immediate regeneration to move the control into the backwash position.
- Refer to the section on manual cycling for information on cycling the control through its positions.
- When in the backwash position, **slowly** shift the bypass to the soft water position until water flows.
- Allow the tank to fill slowly until water flows from the drain line.
- When flow to drain is established, open the bypass fully. Watch the drain line discharge for signs of resin. If signs of resin particles appear, reduce the flow. Increase the flow again when resin no longer appears in the discharge.
- When the unit is filled with water, return the timer to the service position and proceed with setting the microprocessor. Refer to the programming section.

NOTICE: Unplugging the Culligan[®] Silver Series water softener will not affect any of the timer settings. Once programmed in, the settings will be stored indefinitely. In the event of a power failure the time-of-day setting will be stored for 1-2 days. If longer time storage is necessary, a battery backup is available. Refer to the Service Manual for additional information.

BEFORE LEAVING THE INSTALLATION SITE

Flush the sanitizing solution from the unit by running it to drain for a minimum of 40 gallons, or initiate a full recharge cycle (by pushing the 'REGEN.' button twice).

Ensure that the brine tank has water to the level of the float. Add water to the tank with a hose or put the unit into a full recharge so that the brine refill cycle will fill the tank with the proper amount of water.

The water heater will hold hard water for several days. Advise the customer that the existing water volume in the tank will need to be used before the hot water is soft. If soft hot water is required immediately, refer to the water heater owner's manual for the proper method of draining the water heater.

Explain the operation of the softener to the customer. Make sure the customer knows that there will be new sounds associated with the recharging of the unit. Advise the customer to periodically check and replenish the salt supply.

Check the appropriate softener model box on page 2 of the Owner's Guide. Fill in the hardness and number of people, and then sign and date the corresponding performance data sheet. Leave the Owner's Guide with the customer.

Clean up the unit and installation site, removing any soldering, or pipe threading, residues from the equipment and surrounding area with a damp towel.


Sanitizing Instructions

A water softener in daily use on a potable water supply generally requires no special attention other than keeping the salt tank filled. Occasionally, however, a unit may require sanitation under one of the following conditions:

- The unit has stood idle for a week or more (the premises vacant or the residents on vacation).
- On private supplies, the appearance of off-tastes and odors, particularly a musty or "rotten egg" odor .

For occasional occurrences, the softener can be sanitized with household bleach as follows.

NOTICE: If the water supply contains iron, regenerate the softener before sanitizing to remove accumulated iron from the Culler[®] resin.

 **WARNING: HAZARD FROM TOXIC FUMES! CHLORINE BLEACH AND COMMON IRON CONTROL CHEMICALS MAY GENERATE TOXIC FUMES WHEN MIXED.**


- **IF THE UNIT USES CULLIGAN[®] SOFNER-GARD[™] CHEMICAL OR OTHER COMPOUNDS CONTAINING SODIUM HYDROSULFITE OR SODIUM BISULFITE, OR ANY OTHER REDUCING AGENT, DISCONNECT THE DEVICE AND MANUALLY REGENERATE THE UNIT BEFORE SANITIZING.**
 - **DO NOT USE THIS PROCEDURE IF THE SOFTENER SALT CONTAINS IRON CONTROL ADDITIVES.**
1. Remove the brine tank cover and the small cover on the brine valve chamber.
 2. Pour directly into the brine chamber 1 cup (9-inch units) or 2 cups (12-inch units) of common household bleach (5-1/4% sodium hypochlorite).

NOTICE: Do not use lemon scented bleaches, or similar bleaches that contain perfumes.

3. Manually start a recharge cycle. Allow the unit to complete the recharge cycle automatically.


If tastes and odors return frequently, even after sanitization, additional equipment may be required. Have a laboratory analysis performed to determine the possible cause of the odor. Contact Household Application Engineering for assistance. Also, have the consumer send a sample to a qualified laboratory for bacterial analysis.

Parts List - Tank Assembly

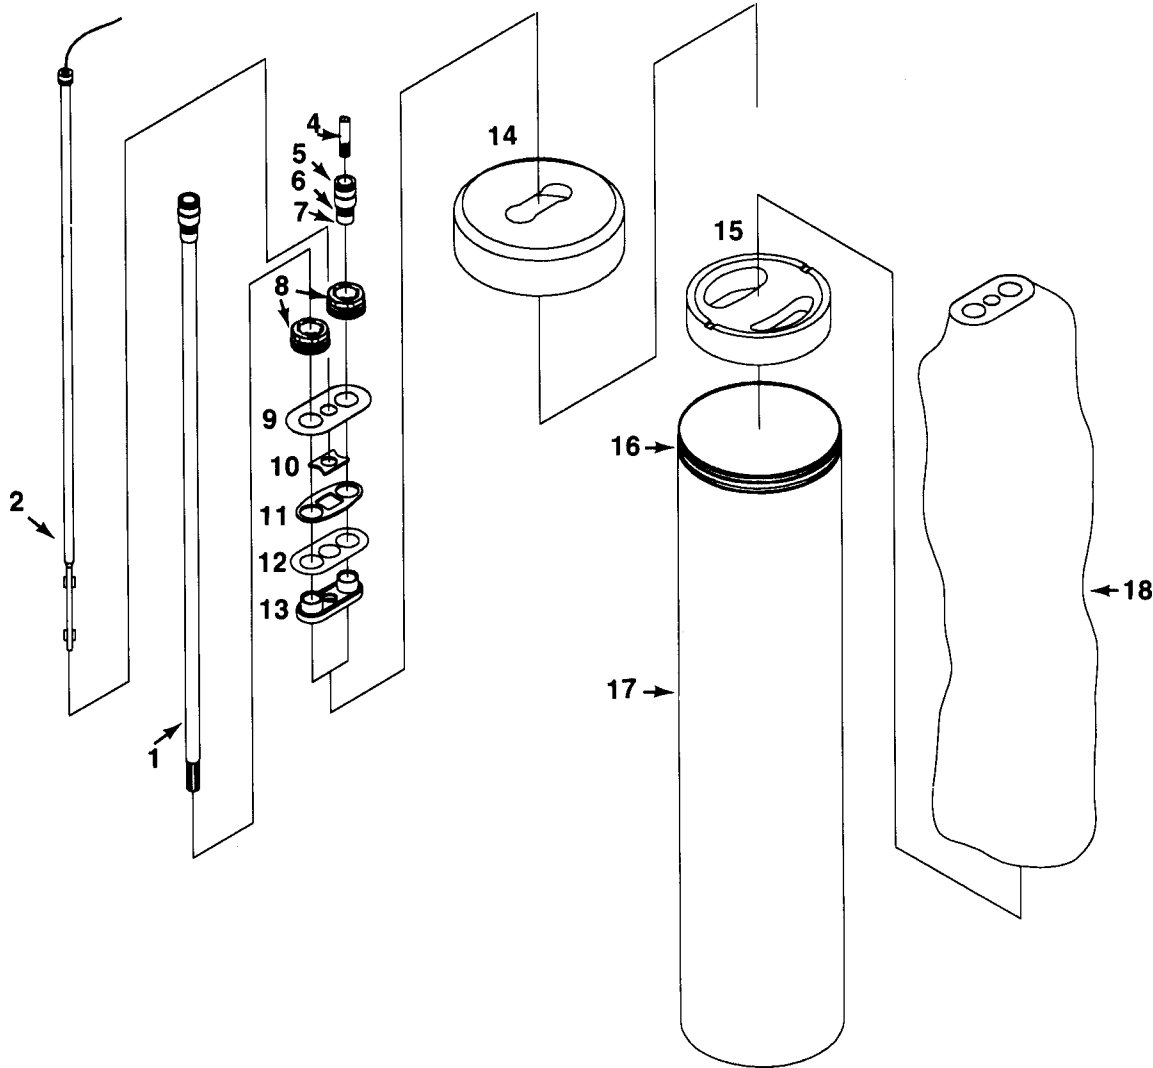

Item	Part Number	Description	Qty.	Item	Part Number	Description	Qty.
*	01006463	Tank Assembly, 9" Aqua-Sensor [®] , Complete		6	P0304411	O-Ring (25/Kit)	2
*	01010135	Tank Assembly, 12" Aqua-Sensor, Complete		7	01007282	Inlet Adaptor	1
*	01003757	Tank Assembly, 9" Soft-Minder [®] , Complete		8	01007283	Nut, Plastic	2
*	01003758	Tank Assembly, 12" Soft-Minder, Complete		9	01007288	Cover Plate, Sensor	1
*	01004297	Tank Replacement, 9" Aqua-Sensor, Empty			01007287	Cover Plate, Meter	1
*	01004300	Tank Replacement, 12" Aqua-Sensor, Empty		10	01002119	Plate	1
*	01004298	Tank Replacement, 9" Soft-Minder, Empty		11	01005450	Gasket	1
*	01004299	Tank Replacement, 12" Soft-Minder, Empty		12	00323205	Barrier	1
1	01007281	Outlet Manifold		13	01007284	Yoke, Sensor	1
2	01010328	Aqua-Sensor Probe, 9"	1		01007285	Yoke, Meter	1
	01010329	Aqua-Sensor Probe, 12"	1	14	01001946	Cover, 9"	1
4	P0232007	Inlet Manifold (25/Kit)	1		01001947	Cover, 12"	1
5	P0333957	O-Ring (25/Kit)	1	15	00444585	Crush Pad, 9"	1
					00444546	Crush Pad, 12"	1
				16	00441997	Gasket, Ring, 9"	1
					00444645	Gasket, Ring, 12"	1
				17	00444583	Well, 9"	1
					00444644	Well, 12"	1
				18	00220236	Liner, 9"	1
					00220222	Liner, 12"	1

Parts List - Control

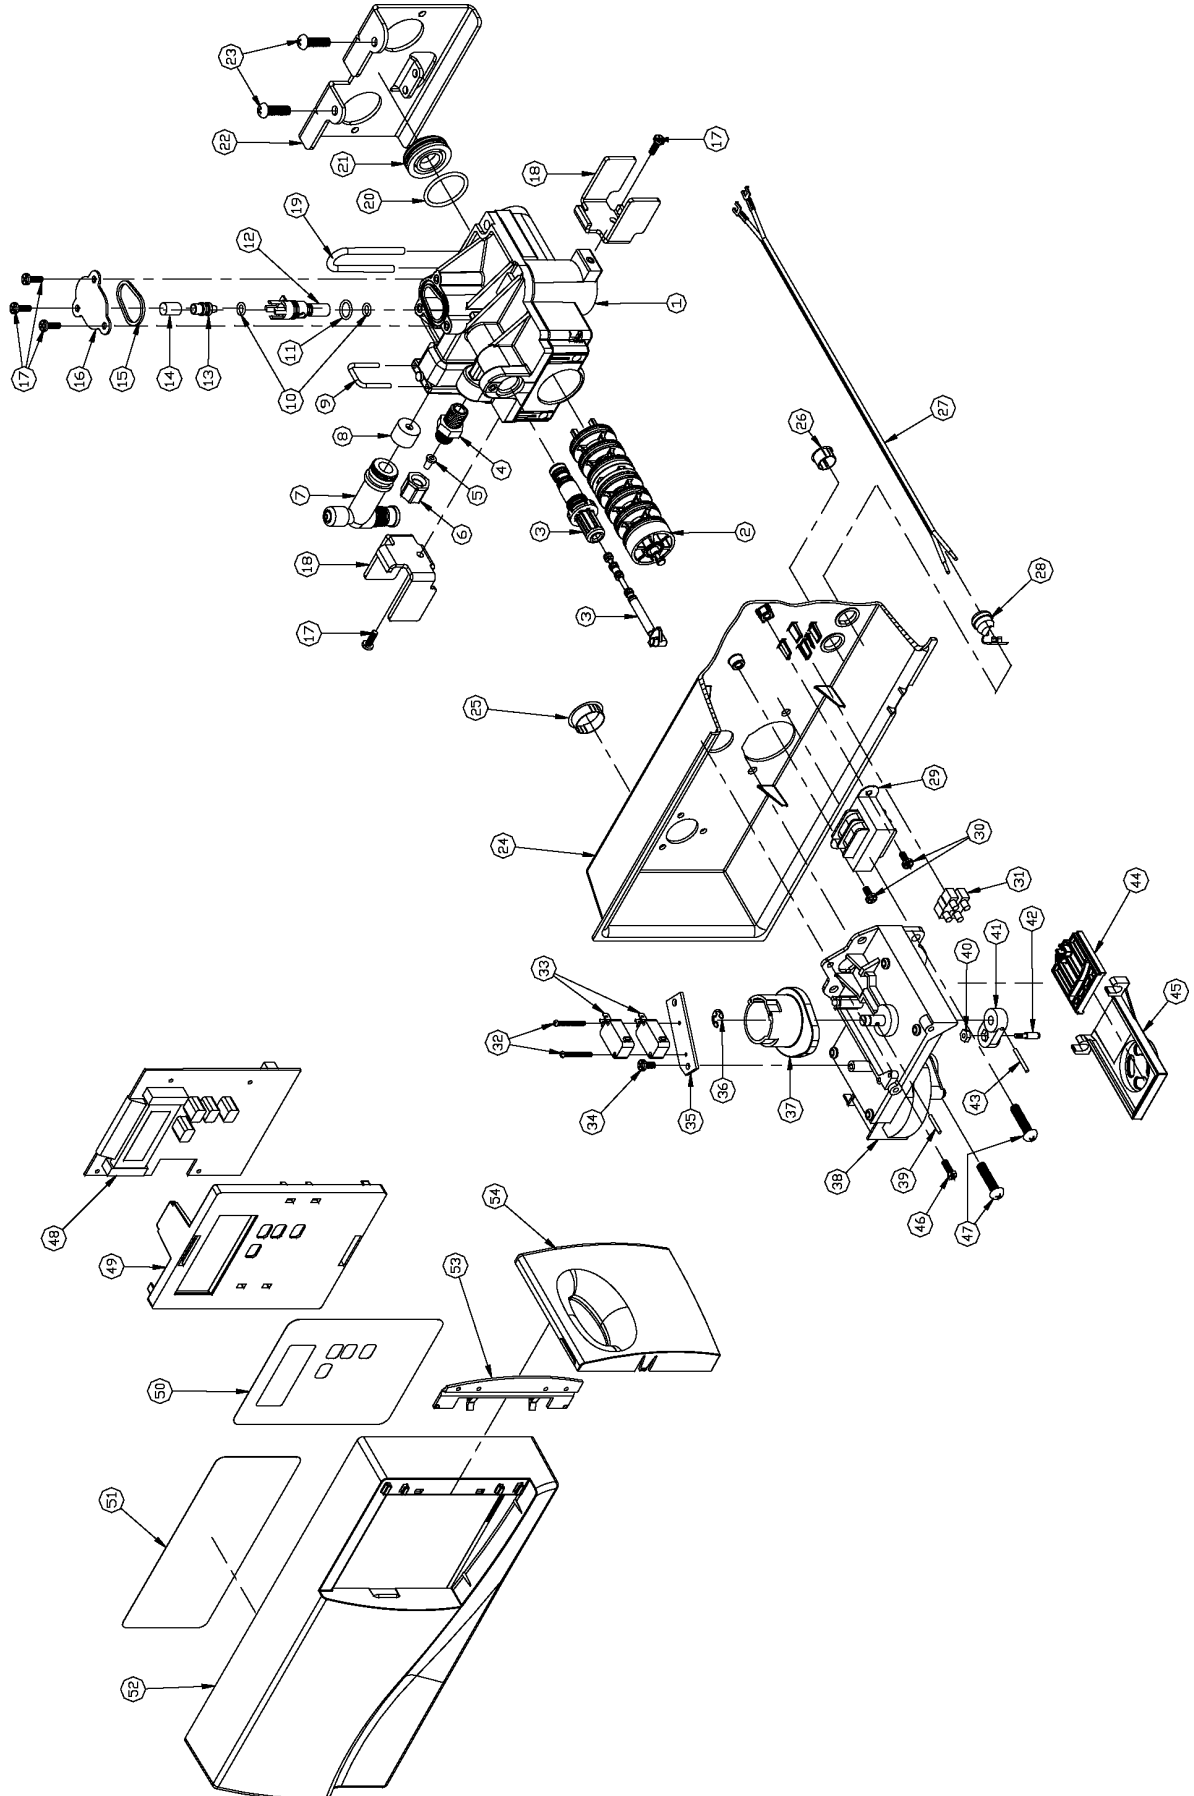

Item	Part No.	Description	Item	Part No.	Description
—	01014278	Control Valve Assembly - Silver Series	28	01000372	Strain Relief
1	00449865	Control Valve	‡ 29	01012845	Transformer
‡ 2	01013083	Seal Pack Assembly	30	P1008473	Screw
‡ 3	01013606	Eductor Sleeve and Eductor Piston Assembly	31	00331848	Terminal Strip
‡ *	P0447986	O-Ring, Eductor Sleeve, Small O-Ring (25/Kit)	32	00448686	Screw
‡ *	P0308407	O-Ring, Eductor Sleeve, Large O-Ring (25/Kit)	‡ 33	01003244	Switch
‡ *	P0448750	Screen, Eductor Sleeve (10/Kit)	34	00318455	Screw
‡ *	00447987	O-Ring, Eductor Piston (10/Kit)	35	00401040	Switch Bracket
4	00443291	Connector Brine Line	36	P1013043	Retaining E-Ring (10/Kit)
5	P0303192	Insert, PP, 0.312" (25/Kit)	37	01013031	Cam
6	P0303193	Nut, PP, 0.312" (25/Kit)	38	01014179	Drive Motor & Bracket Assembly 24V/60Hz
7	00446835	Drain Elbow Assembly w/O-Ring	39	00443559	Roll Pin
8	P0331635	Backwash Restrictor, #2, 9" Tanks (10/Kit)	40	00318354	Nut
	P0331636	Backwash Restrictor, #3, 12" Tanks (10/Kit)	41	00445221	Bellcrank
9	00447387	Retainer, Drain Elbow	42	01012649	Follower
‡ 10	P0308438	O-Ring, Eductor Nozzle and Throat (10/Kit)	43	00445246	Roll Pin
‡ 11	00308437	O-Ring, Eductor Throat	44	01012648	Yoke
‡ 12	00401248	Eductor Throat w/O-Rings	45	01012647	Bracket
‡ 13	00446038	Eductor Nozzle - Blue, 9" Tanks	46	01001784	Screw
14	00446039	Eductor Nozzle - Beige, 12" Tanks	47	00318452	Screw
‡ 15	P0445269	Eductor Screen (10/Kit)	48	01013094	Circuit Board
16	00445797	Gasket	49	01014028	Circuit Board Mounting Plate
17	00401022	Eductor Port Cover	50	01012868	Timer Label
18	00448687	Screw	51	01882290	Setting Label
19	01005130	Bracket	52	01014026	Cover
‡ 20	00448128	Retainer, Rear Body Plug	53	01014030	Hinge
21	P0444914	O-Ring, Rear Seal (10/Kit)	54	01014029	Door
22	00448126	Rear Body Plug	*	01012956	Wall Mount Transformer
23	01004689	Cul-Flo Bracket	*	01014493	Wire, Motor to Terminal Block
24	P0318383	Screw (10/Kit)	*	01014494	Wire, w/Circuit Board Connector
25	01014027	Control Back Plate	*	01012905	Flow Meter Assembly
26	01013966	Plug, 1.00" Snap-in	*	01012958	Wire Harness, Cam
27	01006498	Plug, .562" Snap-in	*	00451701	Hose Clamp, Drain
	A0488016	Power Cord	*	01013839	Back-up Battery

‡ Recommended Spare Parts


* Not Illustrated

Parts List - Salt Storage Tank

Item	Part Number	Description
—	00441390	Brine System, 160 lb. Replacement
—	00441886	Brine System, 250 lb. Replacement
—	00441887	Brine System, 375 lb. Replacement
† 1	01004870	Gold Band
2	00303993	Cover with Band, 250 lb. (114 kg)
	00401042	Cover with Band, 160 lb. (73 kg)
	00303980	Cover with Band, 375 lb. (170 kg)
3	00304010	Tank Only, 250 lb. (114 kg)
	00441391	Tank Only, 160 lb. (73 kg)
	00303975	Tank Only, 375 lb. (170 kg)
*	00304430	Salt Plate, Plastic, 250 lb. (114 kg)
*	00304439	Salt Plate, Plastic, 375 lb. (170 kg)

* Not Illustrated

† Order by footage required

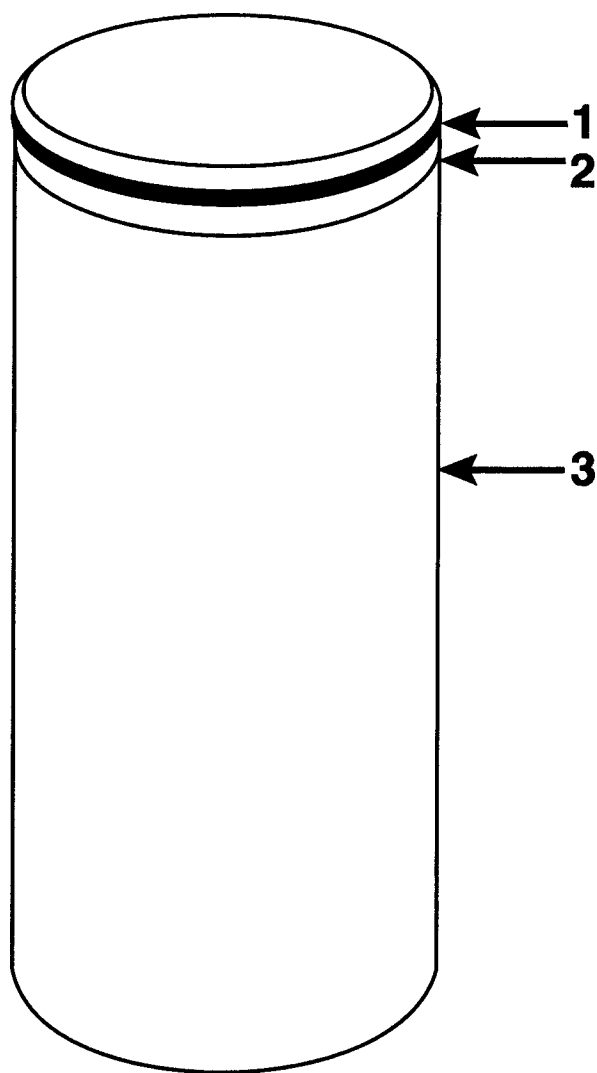

Parts List - Brine Well & Float

Item	Part Number	Description
—	00441888	Brine Valve Assembly
—	00401141	Brine Valve Assy., Brine Tank, 160 lb.
1	00303193	Plastic Nut, 5/16-inch
2	00303192	Plastic Insert
3	00440796	Refill Cap
‡4	00308407	O-ring
‡5	00401622	Flow Restrictor, No. 5, 0.45 gpm (170 lpm)
6	00340014	Stem Seat Assy., 250 lb. (114 kg) & 375 lb. (170 kg)
7	00440795	Refill Body
‡8	00332528	Hat Screen
9	00223435	Plastic Pipe, 1/4-inch NPT x 35 inches long, 250 lb. (114 kg) & 375 lb. (170 kg)
10	00304703	Float Retainer (2 required)
11	00304718	Float Weight, Stainless Steel (2)
12	00444873	Float
13	00332072	Screen Top Seal
14	00444664	Filter Screen Cap
‡15	00444496	Stem Seat
16	00447392	Insert
17	00447781	Air Eliminator Ball
‡18	00304804	Ball Seat
19	00541821	Float Valve Body with Ball Seat
	00541834	Float Valve Body with Ball Seat, 150 lb.
20	00304537	Brine Valve Chamber, 250 lb. (114 kg) & 375 lb. (170 kg) Salt Storage Tank
	00441392	Brine Valve Chamber, 160 lb. (Shown)
21	00304606	Cap, Brine Valve Chamber
*	00446388	Screw, St. Steel, Brine Valve Chamber
*	00446389	Nut, St. Steel, Brine Valve Chamber

* Not Illustrated

‡ Recommended Spare Parts

